4K PTZ Camera



User Manual

English (V2.0)



Copyright

All contents of this manual, whose copyright belongs to our corporation, cannot be cloned, copied or translated without the permission of our corporation.

Notice

Product specifications and information which were referred to in this document are for reference only. We may change, delete, or update any content at any time and without prior notice.

FCC NOTICE (Class A)



This product complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



This product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Class A ITE

Class A ITE is a category of all other ITE which satisfies the class A ITE limits but not the class B ITE limits. Such equipment should not be restricted in its sale but the following warning shall be included in the instructions for use:



Operating this equipment in a residential environment may cause radio interference.

European Community Compliance Statement (Class A)



This product is herewith confirmed to comply with the requirements set out in the Council Directives on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive 2014/30/EU.

Catalogue

1	Note.		1
2	Packing List		
3	Quick Start		
4	About	About Product	
	4.1	Feature	3
	4.2	Specification	3
	4.3	Interface and Switch	5
	4.4	Dimension	5
	4.5	Installation	7
	4.6	Remote Control	8
5	GUI S	ettings	9
	5.1	MENU	9
	5.2	EXPOSURE	9
	5.3	COLOR	9
	5.4	IMAGE	10
	5.5	P/T/Z	
	5.6	NOISE REDUCTION	
	5.7	SETUP	
	5.8	COMMUNICATION SETUP	11
	5.9	RESTORE DEFAULT	11
6	WEB Settings 1		11
	6.1	Access Camera	11
	6.2	Control Camera	11
	6.3	Video Settings	
	6.4	Image Settings	13
	6.5	Audio Settings	14
	6.6	System Settings	14
	6.7	Network Settings	14
	6.8	Device Information	15
	6.9	Download Upgrade Program	15
7	Troub	leshooting	16

1 Note

- During the installation and use of the equipment, all electrical safety regulations of the country and region of use must be strictly observed.
- Please use the power adapter that comes standard with this product.
- Please do not connect multiple devices to the same power adapter (exceeding the capacity of the adapter may generate excessive heat or cause a fire).
- Do not rotate head of the camera by hand, otherwise it may cause mechanical failure.
- When installing this product on a wall or ceiling, secure the device securely. When installing, make sure that there are no obstacles within the rotation range of the gimbal; do not turn on the power until all installations are completed.
- To avoid heat build-up, keep ventilation around the device smooth.

- If the device emits smoke, smells, or makes noises, please turn off the power immediately and unplug the power cord, and contact the dealer in time.
- This device is not waterproof, please keep the device dry.
- This product has no user serviceable parts, damage caused by disassembly by the user is not covered by the warranty.

Specific frequencies of electromagnetic field may affect the image of the camera!

2 Packing List

Name	Quantity
Camera	1
Power Adapter	1
Power Cable	1
RS232 Cable	1
USB Cable	1
Remote Control	1
User Manual	1

3 Quick Start

1) Please check connections are correct before starting.



- Connect the power adapter to the power connector on the rear panel of the camera. The power indicator on the front panel of the camera is on.
- After the camera is powered on, it starts to initialize, right up to the limit position, and then both horizontal and vertical go to the middle position, the motor stops running, and the initialization is completed. (Note: If preset 0 is saved, PTZ will be move to preset 0)

4 About Product

4.1 Feature

Al Tracking

With the help of the AI computing power of the chip, the camera is equipped with advanced AI algorithms to realize monocular humanoid tracking, which can realize automatic tracking of scenes such as education, conferences and live broadcasts.

• NDI|HX2 (Optional)

NDI/HX2 has the characteristics of low delay and plug and play, which is convenient for project implementation and deployment. It has good ecology and supports the simultaneous transmission of audio, video and control commands. It is a new generation of network video transmission mode.

4K UHD

Use 1/2.8-inch high-quality UHD CMOS sensor with a maximum of 8.40 million pixels can realize 4K (3840x2160) ultra-high-resolution high-quality images. And downward compatible with 1080p, 720p and other resolutions.

12x Optical Zoom

It adopts 4K ultra long focal lens with high quality and 8 million ultra-high resolution, 12x optical zoom, and the maximum field angle is 80.8°.

HDMI 2.0

Support HDMI 2.0 interface, which can directly output 4KP60 uncompressed digital video.

• Low Light

The application of 3D noise reduction algorithm greatly reduces image noise. Even under the condition of ultra-low illumination, it still keep the picture clean and clear, and the SNR of image is as high as 55dB.

Multiple Interfaces

Support HDMI and 3G-SDI interface, effective transmission distance of 3G-SDI is up to 150 meters (1080P30). HDMI or 3G-SDI, USB, LAN can output three HD digital signals at the same time.

Remote Control

Through the RS232 and RS485 serial ports, the camera can be controlled remotely.

Gravity Sensor

It supports automatic image flipping function, which is convenient for engineering installation and use.

4.2 Specification

Camera			
Signal System	HDMI: 4KP25, 4KP30, 4KP50, 4KP60, 4KP59.94, 4KP29.97, 1080P25, 1080P30, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I59.94, 720P50, 720P59.94, 720P50, 3G-SDI: 1080P25, 1080P30, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I50, 44, 720P50		
Sensor	720P59.94, 720P60 1/2.8 inch, CMOS,		
Scanning Mode	Effective pixels: 8.40M Progressive		
Lens	12x, f = 3.4mm ~ 41.6mm, F1.8 ~ F3.7		
Digital Zoom	16x		
Minimum Illumination	0.5 Lux @ (F1.8, AGC ON)		
Shutter	1/30s ~ 1/10000s		

4K PTZ Camera

User	Manua

White Balance	Auto, Indoor, Outdoor,	
Backlight	One Push, Manual, VAR	
Compensation	Support	
Digital Noise	<u> </u>	
Reduction	3D Digital Noise Reduction	
Signal Noise		
Ratio	≥55dB	
Horizontal Angle	80.8° ~ 7.5°	
of View		
Vertical Angle of	49.9° ~ 4.3°	
View		
Horizontal	170	
Rotation Range	±170	
Vertical Rotation	20° ~ +90°	
Range	-30 - 190	
Pan Speed	1.8°/s ~ 80°/s	
Range	1.0 / 5 * 60 / 5	
Tilt Speed	1 5°/s ~ 49°/s	
Range	1.5 / 3 45 / 3	
H & V Flip	Support	
Image Freeze	Support	
PoE+	Support	
Number of	255	
Preset		
Preset Accuracy	0.1°	
USB Features		
On empty Constants	Windows 7/8/10, Mac OS X,	
Operate System	Linux, Android	
	 USB 3.0 (Optional): 	
Color System/	YUY2/H.264/H.265/MJPEG	
Compression	• USB 2.0:	
	H.264/H.265/MJPEG	
	 YUY2: (USB 3.0 support) 	
	max to 1080P@30fps	
	USB 3.0/2.0 support:	
Video Format	 H.264 AVC: may to 2160D@20fpc 	
VILLEO FORMAL	 H 265 HEVC· 	
	max to 2160P@30fps	
	• MJPEG:	
	max to 2160P@30fps	
USB Audio	Support	
USB Video	UVC 1.1 ~ 1.5	
Protocol	UVC 1.1 ~ 1.3	
UVC PTZ	Support	

Network Features		
Video Compression	H.264/H.265/MJPEG	
Video Stream	First Stream, Second Stream	
First Stream Resolution	3840x2160, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x480, 640x360	
Second Stream Resolution	720x480, 720x408, 640x480, 640x360, 480x320, 320x240	
Bit Rate Control	CBR, VBR	
Frame Rate	50Hz: 1fps ~ 50fps 60Hz: 1fps ~ 60fps	
Audio Compression	AAC	
Audio Bit Rate	96Kbps, 128Kbps	
Protocols	NDI® HX2, TCP/IP, HTTP, RTSP, RTMP/RTMPS, ONVIF, DHCP, SRT, Multicast	
Input/Output Interface		
HDMI Interface	1 x HDMI: Version 2.0	
3G-SDI Interface	1 x 3G-SDI: BNC type, 800mVp-p, 75Ω. Along to SMPTE 424M standard	
LINE IN Interface	1 x LINE IN: 3.5mm Audio Interface	
	1 x RS485: 3pin phoenix port, Max Distance: 1200m, Protocol: VISCA/ Pelco-D/Pelco-P 1 x RS232 IN: 8pin Min DIN.	
Communication Interface	Max Distance: 30m, Protocol: VISCA/Pelco-D/ Pelco-P	
	1 x RS232 OUT: 8pin Min DIN, Max Distance: 30m, Protocol: VISCA network use	
USB Interface	1 x USB: Type-C	
LAN(PoE+) Interface	1 x LAN: 10M/100M/1000M Adaptive Ethernet Port, support PoE+	
Power Jack	JEITA type (DC IN 12V)	
Physical Parameter	er	
Tally Indicator	1	

Power Indicator	1
Status Indicator	1
Restore Key	1
Power Switch	1
Input Voltage	DC 12V/PoE+(802.3at)
Input Current	Max. 2A
Operating Temperature	0°C ~ 40°C
Storage Temperature	-40°C ~ 60°C
Power Consumption	Max. 18W
Dimension	223mm x 163mm x 166mm
Net Weight	About 1.8Kg



Product specifications and parameters are subject to change

without notice.

4.3 Interface and Switch



Item	Name	
1	RESTORE Key	
2	HDMI Interface	
3	3G-SDI Interface	
4	LINE IN Interface	
5	RS485 Interface	
6	USB Interface	
7	RS232 OUT Interface	
8	RS232 IN Interface	
9	LAN(PoE+) Interface	

Item	Name	
10	DC 12V Interface	
11	Power Switch	

4.4 Dimension







4.5 Installation





The installation diagram is for reference only. The brackets and screws are not standard. For packing accessories, please refer to the actual product.

4.6 Remote Control



Key Description

1. Standby Key

Press to enter standby mode

2. Number Key

Press to set preset or call preset

- 3. *Key
- Use with other keys

4. PRESET Key

Set preset: [PRESET] + Number key (0-9)

5. HOME Key

Confirm selection or press to turn PTZ back to the middle position

6. Return Key
Press to return to the previous menu
7. ZOOM Key
 SLOW: Zoom In [+] or Zoom Out [-] slowly
 FAST: Zoom In [+] or Zoom Out [-] fast
8. L/R SET Key
 Standard: Simultaneously press L/R SET + 1
 Reverse: Simultaneously press L/R SET + 2
9. FOCUS Key
Auto/Manual/Far/Near focus
10. CAMERA SELECT Key
Press to select and control the camera
11. # Key
Use with other keys
12. IR Remote Control Key
[*]+[#]+[F1]: Address 1
[*]+[#]+[F2]: Address 2
[*]+[#]+[F3]: Address 3
[*]+[#]+[F4]: Address 4
13. RESET Key
Clear preset position: [RESET] + Number key (0-
9)
14. PTZ Control Key
PTZ moved according to the arrow indicates
15. MENU Key
Press to enter or exit OSD Menu
16. BACKLIGHT Key
Backlight ON/OFF: Press repeatedly to enable
or disable the backlight compensation.
NOTE:
 Effective only in auto exposure mode.
 If there is a light behind the subject, the
subject will become dark, press the
backlight key to enable the backlight
compensation. Press again to disable this
function.
17. P/T RST (PTZ Reset) Key
PTZ starts to self-test after pressed it
Shortcut Set
[*]+[#]+[1]: OSD menu default English

[*]+[#]+[3]: OSD menu default Chinese

[*]+[#]+[4]: Display current IP address

[*]+[#]+[6]: Quickly recover the default

[*]+[#]+[MANUAL]: Restore default IP address

[*]+[#]+[8]: View the camera version
[*]+[#]+[9]: Quickly set up inversion

5 GUI Settings

5.1 MENU

Press [MENU] key to display the main menu on the normal screen, using arrow key to move the cursor to the item to be set. Press the [HOME] key to enter the corresponding sub-menu.

MENU		
	Exposure	
	Color	
	Image	
	P/T/Z	
	Noise Reduction	
	Setup	
	Communication Setup	
	Restore Default	
	[Home] Enter	
	[Menu] Exit	

5.2 EXPOSURE

Move the main menu cursor to [Exposure], and press [HOME] key enter the exposure page, as shown in the following figure.

EXPOSURE		
	Mode	Auto
	ExpCompMode	Off
	Backlight	Off
	Gain Limit	10
	Anti-Flicker	50Hz
	Meter	Average
	DRC	1
	▲▼Select Item ◀▶Change Value [Menu] Back	

Mode: Auto, Manual, SAE, AAE, Bright.

ExpCompMode: On, Off (Effective only in Auto mode).

ExpComp: -7 ~ 7 (Effective only in ExpCompMode item to On).

Backlight: On, Off (Effective only in Auto mode). **Bright:** 0 ~ 17 (Effective only in Bright mode). **Gain Limit:** 0 ~ 15 (Effective only in Auto, SAE, AAE, Bright mode).

Anti-Flicker: Off, 50Hz, 60Hz (Effective only in Auto, AAE, Bright mode).

Meter: Average, Center, Smart, Top.

Iris: F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0, Close (Effective only in Manual, AAE mode).

Shutter: 1/30, 1/60, 1/90, 1/100, 1/125, 1/180, 1/250, 1/350, 1/500, 1/725, 1/1000, 1/1500, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000 (Effective only in Manual, SAE mode).

Gain: 0 ~ 7 (Effective only in Manual mode). DRC: 0 ~ 8.

5.3 COLOR

Move the main menu cursor to [Color], and press [HOME] key enter the color page, as shown in the following figure.

COLOR			
	WB Mode	Auto	
	RG Tuning	0	
	BG Tuning	0	
	Saturation	100%	
	Hue	7	
▲▼Select Item ◀►Change Value			
	[Menu] Back		

WB Mode: Auto, Indoor, Outdoor, One Push, Manual, VAR.

RG: 0 ~ 255 (Effective only in Manual mode).

BG: 0 ~ 255 (Effective only in Manual mode).

RG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR Mode).

BG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR Mode).

Saturation: 60% ~ 200%.

Hue: 0 ~ 14.

Color Temp: 2500K ~ 8000K (Effective only in VAR mode).

5.4 IMAGE

Move the main menu cursor to [Image], and press [HOME] key enter the image page, as shown in the following figure.

IMAGE		
	Luminance	6
	Contrast	9
	Sharpness	3
	Flip-H	Off
	Flip-V	Off
	B&W-Mode	Off
	Style	Default
	▲▼Select Item ◀ ▶Change Value [Menu] Back	

Luminance: 0 ~ 14.

Contrast: 0 ~ 14.

Sharpness: 0 ~ 15, auto.

Flip-H: On, Off.

Flip-V: On, Off.

B&W-Mode: On, Off.

Style: Default, Norm, Bright, PC.

5.5 P/T/Z

Move the main menu cursor to [P/T/Z], and press [HOME] key enter the P/T/Z page, as shown in the following figure.

P/T/Z	
SpeedByZoom	On
AF-Zone	Front
AF-Sense	High
L/R Set	STD
Display Info	On
Image Freeze	Off
Digital Zoom	Off
Call Preset Speed	24
Pre Zoom Speed	5
▲▼Select Item	
Change Value	
[Menu] Back	

SpeedByZoom: On, Off.

AF-Zone: Front, Top, Center, Bottom. AF-Sense: Low, Normal, High.

L/R Set: STD, REV.

Display Info: On, Off. Image Freeze: On, Off. Digital Zoom: Off, 2x, 4x, 8x, 16x. Call Preset Speed: 1 ~ 24. Pre Zoom Speed: 0 ~ 7.

5.6 NOISE REDUCTION

Move the main menu cursor to [Noise Reduction], and press [HOME] key enter the noise reduction page, as shown in the following figure.



NR3D Level: Off, 1 ~ 9.

5.7 SETUP

Move the main menu cursor to [Setup], and press [HOME] key enter the setup page, as shown in the following figure.

	SETUP	
 Lar DVI Vid Aut Vid Oth 	iguage Mode eo Format o Scan Shoot eo Mode ier	EN HDMI 1080P30 : Off
▲ \ ◀ \ [Me	Select Item Change Valu enu] Back	Ie

Language: EN, Chinese, Russian. DVI Mode: HDMI. DVI.

Video Format: 4KP25, 4KP29.97, 4KP30, 4KP50, 4KP59.94, 4KP60, 1080P30, 1080P25, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I59.94, 720P60, 720P59.94, 720P50. Auto Scan Shoot: On, Off. Video Mode: SDI-3G Mode, Video Output. SDI-3G Mode: LEVEL-A, LEVEL-B. Video Output: HDMI, SDI. Other: Auto Inversion, Tally Mode, USB2.0 Audio. Auto Inversion: On, Off. Tally Mode: On, Off. USB2.0 Audio: On, Off (Only for USB2.0).

5.8 COMMUNICATION SETUP

Move the main menu cursor to [Communication Setup], and press [HOME] key enter the communication setup page, as shown in the following figure.



Protocol: Auto, VISCA, PELCO-D, PELCO-P.

V_Address: 1 ~ 7 (Effective only in Auto, VISCA protocol).

V_AddrFix: On, Off (When set to On, useless in 88 30 01 FF Command).

P_D_Address: 0 ~ 254 (Effective only in Auto, PELCO-D protocol).

P_P_Address: 0 ~ 31 (Effective only in Auto, PELCO-P protocol).

Net Mode: Serial, Paral.

Baudrate: 2400, 4800, 9600, 38400.

5.9 RESTORE DEFAULT

Move the main menu cursor to [Restore Default], press [HOME] key enter restore default page, as shown in the following figure.



Restore: Yes, No.



GUI menu and parameters are subject to change without notice.

6 WEB Settings

6.1 Access Camera

Access http://192.168.100.88 to pop up the login window, then input username (default: admin) and password (default: admin). After login, it will show as below:



6.2 Control Camera

All pages include two menu bars: Real time monitoring: displaying video image Parameter setup: with function buttons.

A. Video Viewing Window

4:48

Video viewing window must be same as video resolution, the bigger the resolution is, the bigger the playing area is. Double click viewing window, will show full-screen, double click again, will return to initialized size.

Status bar in viewing window shown as below:



- Video playback pause button: control realtime video pause, stop the last picture, click recoverable video again.
- 2) Audio control buttons: can adjust the volume or set silent mode.
- 3) Full screen switch button.

B. PTZ Setup



1) Pan and Tilt Control

Up, Down, Left and Right arrows and the home button allow you to manually drive the camera to the desired position.

2) Zoom

Zoom In and Zoom Out buttons allow for wide or narrow view of the space.

3) Focus

Focus In and Focus Out buttons allow for fine manual focus adjustment if the camera has any problems auto focusing on the difficult object.

4) PTZ Speeds

Pan speed can be set at any rate between 1 ~ 24, Tilt speed can be set at any rate between 1 ~ 20. Zoom and Focus speeds can be set at any rate between 1 ~ 7.

5) PTZ Presets

After manually setting up a shot that you would like to return to later, you can save presets for quick recall of these positions. Type a number between 0 and 254 into the Preset box. Click the "Set" button to save the current location with that preset number. Click the "Call" button to cause the camera to return to that position. This enables smooth, quick and convenient control without the need to manually drive the camera.

You can set up preset that user want as below. Method: Type preset number into the Preset box.



Preset: Optional items: 0 ~ 254.

6) PTZ/OSD Dropdown

From the dropdown menu, clicking the OSD option will open the on-screen display menu of the camera giving you control from within the IP interface.

C. Language Selection

English	
	中文(简)
Language	Русский

Click either "Chinese", "English" or "Russian" to change the language of the webpage.

6.3 Video Settings

Video Settings	
HDMI/SDI Output	HDMI 🖂
Video Format	1920x1080/30p
Encode Level	mainprofile 🖂
First stream	
Encode Protocol	H264
Resolution	1920x1080
Bit Rate	4096
Frame Rate	25 🔽 fps
I Key Frame Interval	25
Bit Rate Control	CBR



1) HDMI/SDI Output

Support HDMI and SDI Output.

2) Video Format

HDMI output support 3840x2160/60p, 3840x2160/59.94p, 3840x2160/50p, 3840x2160/30p, 3840x2160/29.97p, 3840x2160/25p. Both HDMI and SDI output support 1920x1080/60p, 1920x1080/59.94p, 1920x1080/50p, 1920x1080/60i,

1920x1080/59.94i, 1920x1080/50i,

1920x1080/30p, 1920x1080/29.97p,

1920x1080/25p, 1280x720/60p, 1280x720/59.94p, 1280x720/50p.

3) Encode Level

Support mainprofile and highprofile two levels.

4) Encode Protocol

Support H.264, H.265 and MJPEG protocols.

5) Resolution

First stream support 3840x2160, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x480, 640x360. Second stream support 720x480, 720x408, 640x480, 640x360, 480x320, 320x240; The bigger resolution is, the clearer the image will be, more network bandwidth will be taken.

6) Bit Rate

The user can specify the bit rate. Generally speaking, the larger of the bit rate, the clearer of the image. However, the configuration of the bit rate needs to be combined with the network bandwidth. When the network bandwidth is narrow and the bit rate is configured larger, the video stream cannot be transmitted normally, and the visual effect is worse.

7) Frame Rate

User can specify the size of the frame rate, generally, the frame rate greater, the image more smooth; Frame rate is smaller, the more sense of beating.

8) I Key Frame Interval

Set interval between 2 I frame, the bigger interval is the response will be lower from view window.

9) Bit Rate Control

Code stream control way:

CBR (Constant Bit Rate): Video coder will be coding according to preset speed.

VBR (Variable Bit Rate): Video coder will adjust the speed based on preset speed to gain the best image quality.

6.4 Image Settings



1) Brightness

Brightness of image: 0~14 (Default value is 6).

2) Saturation

Saturation of image: 0~14 (Default value is 4).

3) Contrast

Contrast of image: 0~14 (Default value is 9).

4) Sharpness

Sharpness of image: 0~16 (Default value is 3).

5) Hue

Hue of image: 0~14 (Default value is 7).

6) Flip

Turn On/Off the Flip function.

7) Mirror

Turn On/Off the Mirror function.

6.5 Audio Settings

Audio Settings		
Audio Switch	On	\checkmark
Audio Type	AAC	\checkmark
Sample Rate	48K	\bigtriangledown
Bit Rate	96K	\checkmark
Input Type	LINE IN	\checkmark
Input Vol	20	∨ dB
ADTS Options	Off	\leq
Si	ubmit Cancel]

1) Audio Switch

Enable or disable audio switch.

2) Audio Type

Optional items: AAC.

3) Sample Rate

Optional items: 44.1K, 48K.

4) Bit Rate

Optional items: 96K, 128K.

5) Input Type

Optional items: LINE IN, MIC.

6) Input Vol

The volume of the channel.

7) ADTS Options

Optional items: On, Off.

6.6 System Settings

Initialize		
	Reboot	Reboot
User		
	UserName	admin
	Passwd	•••••
	Guest	guest
	Passwd	•••••
	s	ubmit Cancel

1) Reboot

Click the "Reboot" button, system restart.

2) Username and Password

The user can modify the password (letters and Numbers only).

6.7 Network Settings

Lan Settings		
IP Configuration Type	Fixed IP Address	
IP Address	192.168.100.88	
Subnet Mask	255.255.255.0	
Gateway	192.168.100.1	
DNS Address	8.8.8.8	
MAC Address	D4:E0:8E:A9:73:45	
Submit Cancel		
Port Settings		
HTTP Port	80	
RTSP Port	554	
TCP Port	5678	
UDP Port	1259	
Sony Visca	52381	
RTMP(S) Settings		
First Stream	O On ● Off □ Video □ Audio	
MRL	rtmp://192.168.100.138/live/stream0	
Second Stream	O On ● Off □ Video □ Audio	
MRL	rtmp://192.168.100.138/live/stream1	
SRT Settings		
SRT	● On O Off	
SRT Port	4578	
SRT Encryption	None 🔽	
SRT Password	1234564913131	
RTSP Settings		
RTSP Auth	O On ● Off	
ONVIF Settings		
ONVIF	O 0n ● 0ff	
ONVIF Auth	O 0n ● 0ff	
Multicast Settings		
Multicast	O 0n ● 0ff	
Address	224.1.2.3	
Port	6688	

NTP Settings	
NTP time sync	O On ● Off
Time Zone	(GMT+08:00) Beijing, China 🔽
Server address	cn.ntp.org.cn
Time interval(min)	1440
Main time show	O 0n ● Off
Position	X 0 Y 0
Sub time show	O 0n ● Off
Position	X 0 Y 0
	Submit Cancel

1) Lan Settings

Default the IP address is 192.168.100.88, the MAC address cannot be modified.

2) Port Settings

A. HTTP Port

IP address identifies the network device, the device can run multiple web applications, each network program using network port to transmit data, so data transmission to be carried out between the port and port. Port setting is to set up web server program using which port to transmit. When port mapping, need to be consistent with the port number (default port: 80).

B. RTSP Port

The 4K PTZ camera support RTSP protocol, use the VLC tools broadcast, default port: 554.

C. TCP Port

Support TCP connection then control camera, default port: 5678.

D. UDP Port

Support UDP protocol, default port: 1259.

E. Sony Visca

Support Sony Visca, default value: 52381.

3) RTMP(S) Settings

Setting the MRL of RTMP, select enable or disable video and audio. You can select control code stream of "On", "Off", "Video", "Audio" between in the two streams.

4) SRT Settings

Turn On/Off SRT, Setting the SRT Port, SRT Encry and SRT Password.

5) RTSP Settings

Turn On/Off RTSP Auth.

6) ONVIF Settings

Turn On/Off ONVIF and ONVIF Auth.

7) Multicast Settings

Turn On/Off multicast. Setting the multicast address (default value is 224.1.2.3) and port (default value is 6688, then 6688 is the multicast port of the first stream; 6690 is the multicast port of the second stream).

8) NTP Settings

Turn On/Off NTP time sync, main time show and sub time show. Setting NTP server address, time interval, main stream position and sub stream position.

6.8 Device Information

Information	
Device ID	HD Camera
Device Type	G50.V
Software Version	SOC v2.0.23 - ARM 6.0.64S
Webware Version	v1.5.5
	Submit Cancel

6.9 Download Upgrade Program

If you need the camera upgrade program, please contact the manufacturer.



WEB interface and parameters are subject to change without notice.

7 Troubleshooting

Image

- The monitor shows no image
- Check that the camera power supply is connected, the voltage is normal, and the power indicator light is always on.
- 2) Turn off the power switch to check whether the camera is self-testing.
- Check the cable of video platform and TV whether correct connection.
- The video image displayed by the camera lens is jittery
- 1) Check whether the camera installed position be stabled.
- 2) Check whether have vibrating machinery or object near the camera.
- There is no video image in Browser IE browser does not support H5, you need to use VLC plug-in to view videos. Please access VLC website (http://www.videolan.org/vlc) download and install the 32-bit VLC media player, after it installed, access 4K PTZ camera will have normal image display. Other mainstream browsers already support H5 and do not need to install the VLC plug-in.

- Unable to access 4K PTZ camera through Browser
- Using PC to access the network to test whether the network access can work properly, first of all, the network fault caused by the PC virus can be eliminated, until the PC and 4K PTZ camera can communicate with each other Ping.
- Disconnect the network, connect 4K PTZ camera and PC separately, and reset the IP address of PC.
- Check IP address, subnet mask, and gateway settings for 4K PTZ camera.
- 4) Check whether the MAC address is conflicts.
- 5) Check whether the web port is modified. The default web port is 80.
- Forget the IP address or login password Please remember (The default IP address: 192.168.100.88; default user name: admin; default password: admin).

Control

- Remote control cannot control
- 1) Check and replace the new battery for the remote controller.
- 2) Check whether the camera working mode is correct.
- 3) Check whether the address of remote control can match the camera.
- Serial port cannot control
- 1) Check whether the camera protocol, address and baud rate such is the same.
- 2) Check whether the control line is connected well.

