

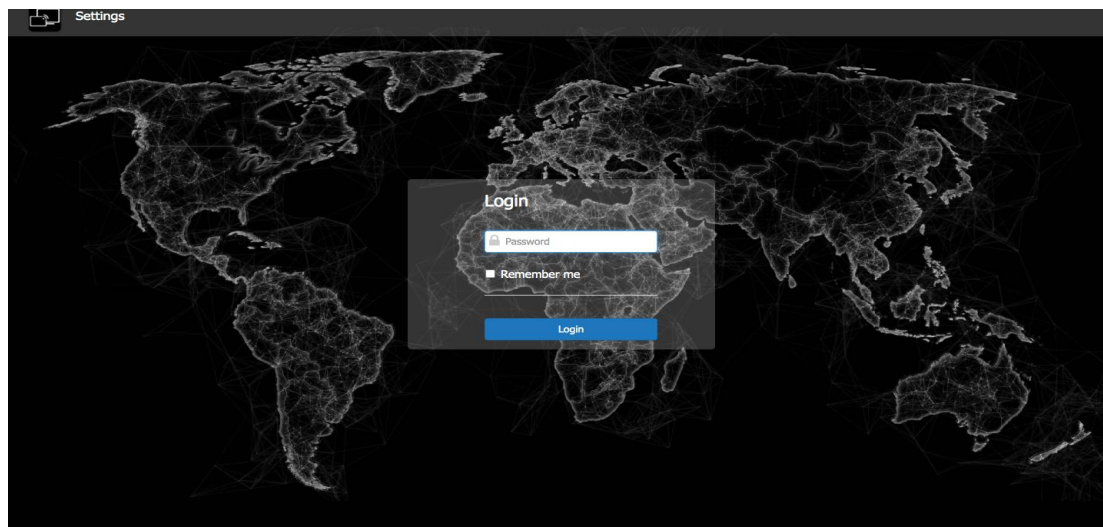


1.Connect the lan:

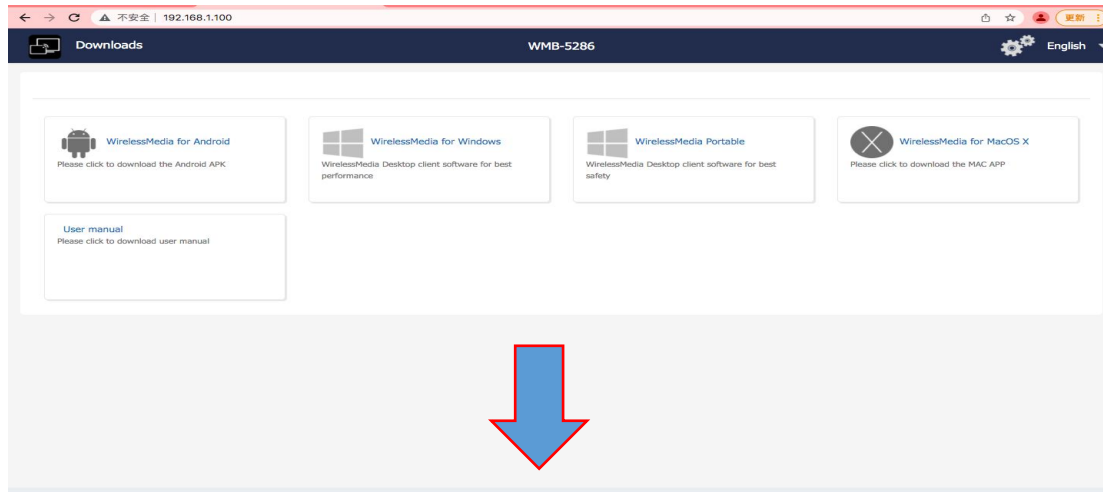

Password: admin

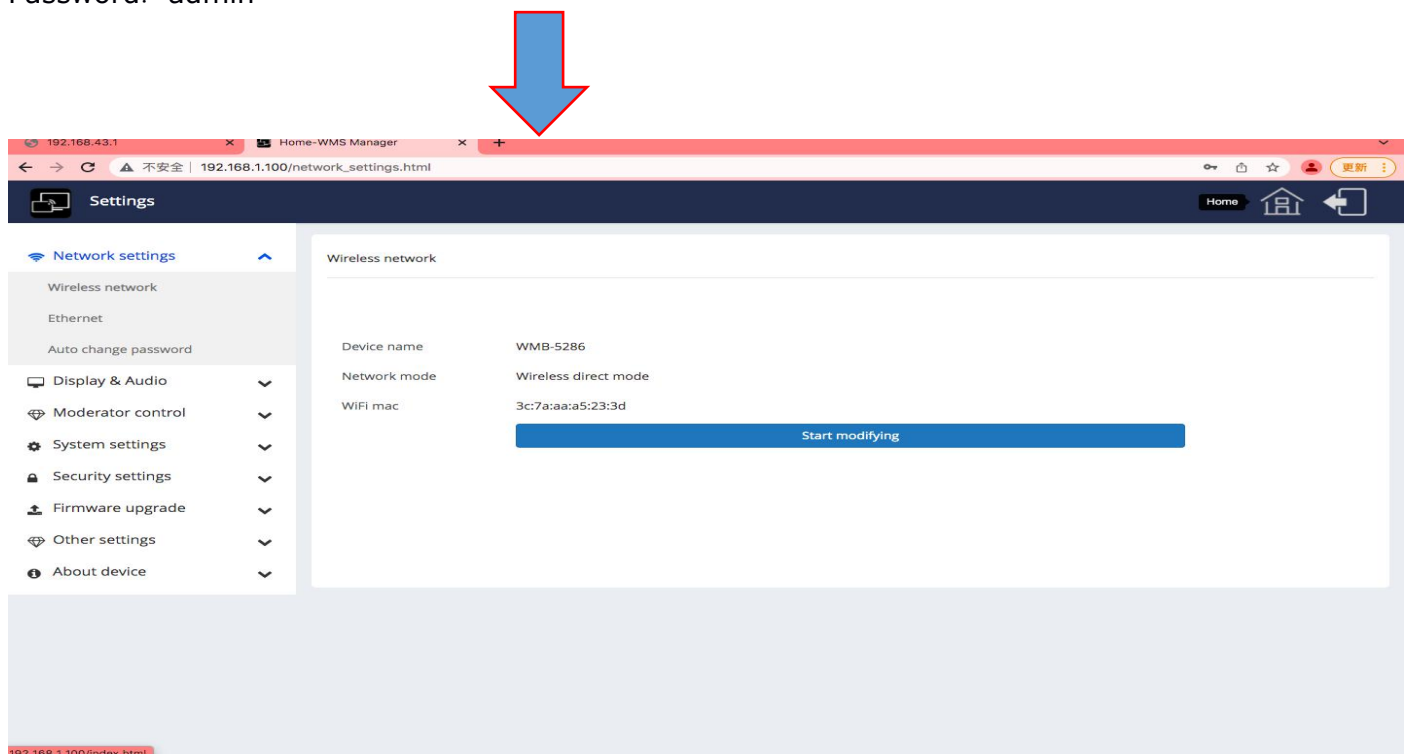

192.168.43.1 Home-WMS Manager 192.168.1.100/network_settings.html

Settings

- Network settings
 - Wireless network
 - Ethernet
 - Auto change password
- Display & Audio
- Moderator control
- System settings
- Security settings
- Firmware upgrade
- Other settings
- About device

Wireless network

 
1. Device name 2. Mode selection 3. Network settings 4. SSID setting

Wireless direct mode

Wireless infrastructure mode

LAN Infrastructure mode

Previous Next step



192.168.43.1 Home-WMS Manager 192.168.1.100/network_settings.html

Settings

- Network settings
 - Wireless network
 - Ethernet
 - Auto change password
- Display & Audio
- Moderator control
- System settings
- Security settings
- Firmware upgrade
- Other settings
- About device

Wireless network

1. Device name 2. Mode selection 3. Network settings 4. SSID setting

Allow internet access (bridging) via LAN 1

Allow internet access (bridging) via LAN 2

Disable internet access


SSID discovery and connection: Yes

Frequency: 5GHz

Channel: 36

Password:

Previous Next step



192.168.43.1 Home-WMS Manager 192.168.1.100/network_settings.html

Settings

 
- Network settings
 - Wireless network
 - Ethernet
 - Auto change password
- Display & Audio
- Moderator control
- System settings
- Security settings
- Firmware upgrade
- Other settings
- About device

Wireless network

1.Device name → 2.Mode selection → 3.Network settings → 4.SSID setting

GUEST network SSID:

STAFF network SSID:



192.168.43.1 Home-WMS Manager 192.168.1.100/network_settings.html

Settings

- Network settings
 - Wireless network
 - Ethernet
 - Auto change password
- Display & Audio
- Moderator control
- System settings
- Security settings
- Firmware upgrade
- Other settings
- About device

Please re-pair the dongle before use it !

